

# BEAR

## TORQUE WRENCH

- Precise torque control, which is essential when screwing full thread screws into a metal plate, for example; wide adjustment range



BEAR

BEAR2

### CODES AND DIMENSIONS

CODE	dimensions	weight	tightening torque	pcs
	[mm] [in]			
BEAR	395 x 60 x 60	1075	10 - 50	1
	15 9/16 x 2 3/8 x 2 3/8	2.4	7 - 37	
BEAR2	535 x 60 x 60	1457	40 - 200	1
	21 1/16 x 2 3/8 x 2 3/8	3.2	29 - 147	

With 1/2" square drive.



# TORSMART

## DIGITAL ADAPTER FOR TIGHTENING TORQUE CONTROL

- Digital torque meter for accurate tightening torque control
- TORSMART is simply inserted between the tool (drill or wrench) and the socket
- It precisely measures the tightening torque, stores the data, and transmits it to the dedicated app for analysis. An acoustic signal indicates when the preset torque limit has been reached



### CODES AND DIMENSIONS

CODE	torque range		pcs
	[Nm]	[ft-lbs]	
TORSMART80	8 - 80	6 - 60	1
<b>Torque range</b>	8 - 80 Nm		
<b>Connection</b>	3/8" (9,5 mm)		
<b>Dimensions (diameter x length)</b>	42 x 75 mm		
<b>Weight</b>	160 g		

Power supply: rechargeable battery, supplied with USB cable - charger not included.

To operate, TORSMART must be connected via Bluetooth® through the Hydrajaws Verify application.

CE



**APP DOWNLOAD**  
Download the Hydrajaws Verify App to use TORSMART

